

Li-ion battery pack for charcoal smoker controller (AUB3000)

Version 1.1 (May 2016)

Warning: To reduce the risk of fire or burns, DO NOT attempt to open, disassemble, or service the battery pack. DO NOT crash, puncture, short external contacts, or dispose it in fire or water above 140°F. Please use supplied charger only.

Important: Must turn on the power switch to charge.

1. Specifications

AUB3000:

Operating/storage temperature: ≤ 140 °F
Capacity: 3000mAH/12V, 7200mAH/5V or 36WH
Voltage input: 12.6VDC
Voltage output: 12VDC (barrel), 5VDC (USB)
Dimension: 107x64x26mm (4.2x2.5x1.0")
Battery weight: 0.22kg (7.6oz)

AUB3000 charger:

Input voltage: 100~240VAC
Output voltage: 12.6VDC
Output maximum current: 500mA

2. Package list:



Figure 1. This product includes (from left to right):
Power adapter, Battery Pack, Output cable for SYL-1615

3. Names of parts



Figure 2. Names of parts on battery pack
AUB3000.

4. Charging the battery pack

- 1) Plug in the supplied charger to the wall outlet. A green LED indicator on the charger should lit (when it doesn't charge battery).
- 2) Flip the power switch on to turn on the battery pack. The red power indicator on the battery pack will lit.
- 3) Plug in the connector from the charger to the Power Input port on the battery pack.
- 4) The indicator on the charger will turn red when the battery is charging. This indicator will turn green when the battery is fully charged or when the battery pack is turned off. The power indicator on the battery will be lit in red all the time.

5. Using the battery pack with Auber's SYL-1615 charcoal smoker controller (or charging your mobile device):

- 1) Please follow instructions in section 4 to charge the battery before using it with SYL-1615.
- 2) Connect the power-out port of the battery pack and the power-in port of the SYL-1615 with the DC power cable (5.5 x 2.1 mm barrel connectors on both ends).
- 3) If you are charging a mobile device that needs 5VDC (such as a smart phone or a USB speaker), connect your device and the battery pack with a USB cable. Using a USB cable, to either 5V DC power output socket or 12V DC power output socket on this battery pack.
- 4) Flip the power switch on to turn on the battery pack. The red power indicator on the battery pack will lit.

Notes

- 1) With the smart Battery Managing System (BMS), the circuit will be automatically cut-off in case of any incorrect uses. To restart it, simply recharge it.
- 2) No USB cable is included.
- 3) One DC power cable with two 5.5 x 2.1 mm barrel connectors on both ends is included in the kit. For SYL-1615 controller, there are two barrel connectors: one is 5.5 x 2.1 mm (for power input, on the bottom left), one is 5.5 x 2.5 mm (for supplying power to the blower). Please identify the correct connector for before connecting the battery pack to the SYL-1615 controller.