



How to handle the braided metal shielding at the mini connectors

1. Cut back the braided metal shielding

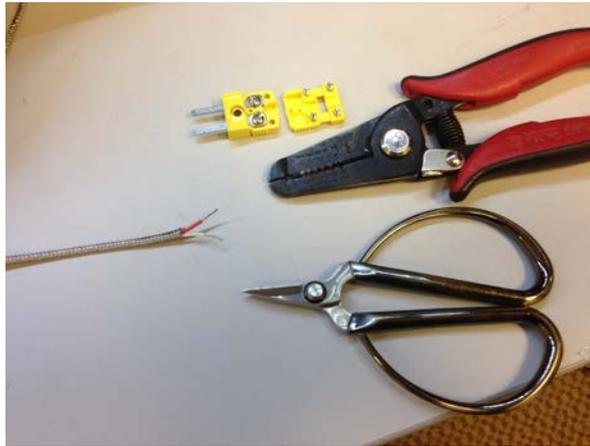


2. Put heat shrink and heat

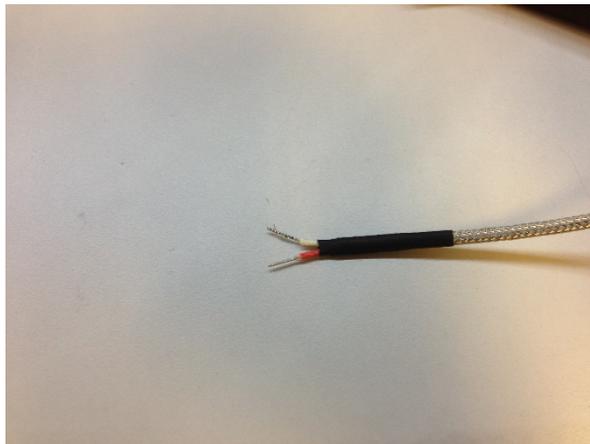

3. Put the red ring onto the wire



4. Put the clear ring and connect the wire to the connector

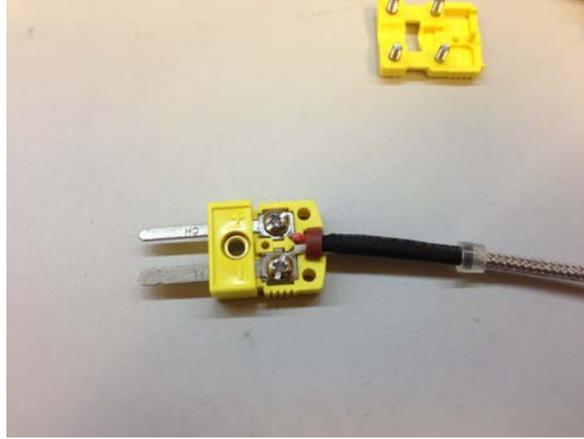

5. Done

